

Infrared Thermal Imager **Thermo Tracer TH7102 series**

Report Viewer TH71-715 Software Download

Report Viewer TH71-715

Report Viewer TH71-715 is software to see report which was made by NEC San-ei Report Generator TH71-713 software.

How to Download

Software name : Report Viewer TH71-715

Version : V1.0

Required OS : Windows 98, Windows ME, Windows NT, Windows 2000

File name : SET715.EXE (with self-decompression)

1. Procedure

- 1) Download SET715.EXE to a folder. After downloading, open the folder with the Explorer.
- 2) Double click the SET715.EXE to decompress following setup files in the current folder.


Folder	:	threport	
Setup file	:	product.ini	(8 bytes)
Setup program	:	setup.exe	(133244 bytes)
Setup information	:	th715.inf	(11367 bytes)
Setup information	:	th715nt.inf	(11314 bytes)

In the threport folder, following file is decompressed.


Report Viewer main body : thrview.exe (524288 bytes)

- 3) Copy all files and folders onto a floppy disk and make the master program floppy disk. (Do not change file name when copying. If file name is different, setup can not be done.)
- 4) Insert the master program floppy disk into the floppy disk drive.
- 5) Select the drive containing the master disk from Explorer.
- 6) Set mouse cursor to SETUP.EXE and double click it.


7) The setup program starts and WELCOME screen appears. Click Next >.

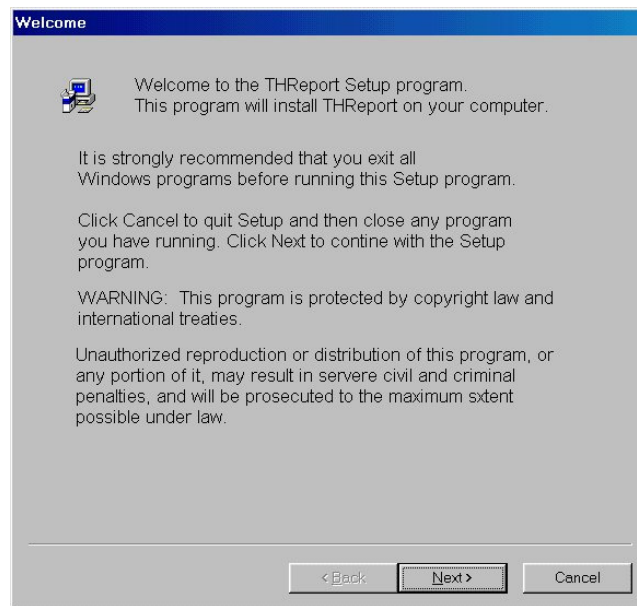


8) The User data screen appears. Refer to the user registration and user contract, and enter name, company and series number (you can enter any number) in the spaces provided. This information is registered in the version data. After entering the information, click Next >.

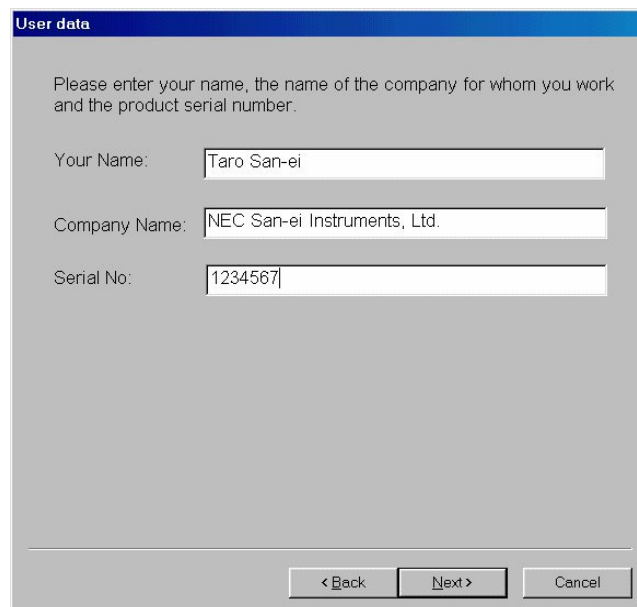

- 9) The Choose Destination Location screen appears for specifying the directory for installing the program. If change is unnecessary, click Next >.

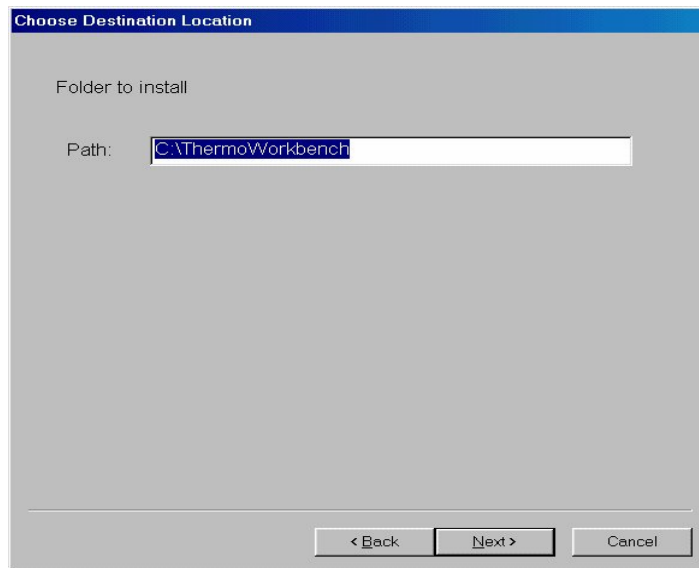

- 10) The File copy start screen appears. Click Finish to proceed with setup.

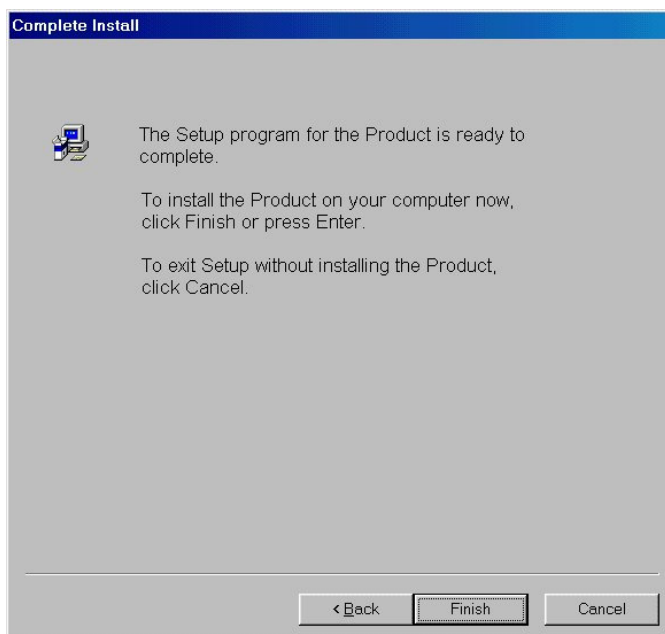

- Conduct setup while another application is not started. If an Error message appears, reset the computer and reinstall the program according to the setup procedure.
- During setup, do not remove the floppy disk.

2. Others

- 1) All copyrights o this software are reserved by NEC San-ei Instruments, Ltd. Unauthorized copying, reproduction, or modification of this software in whole or in part is prohibited.
- 2) The contents of this software are subject to change without prior notice.